

CAS 3.1

Infinity Loudspeaker Troubleshooting/Repair Tips

Most customers prefer to do simple loudspeaker repairs themselves. By following the steps below, a majority of loudspeakers can be returned to their original factory performance with minimum effort. Choose the example that best describes the problem you are experiencing.

Problem 1: No sound or distorted sound from one loudspeaker in a pair (or set)

Connect the dead/distorting loudspeaker to a different amplifier channel (one that had a functioning loudspeaker connected to it). If it functions normally, the problem is not loudspeaker-related. If the loudspeaker still makes no sound or sounds distorted, a wire may have become loose or disconnected, the network (also known as a crossover) may be defective, the drivers (woofer, tweeter, etc.) may be defective or, in very rare cases, all may be defective.


Refer to the wiring diagram and exploded view below. The network is a small circuit board found on the inside of the terminal cup, or mounted to an inside wall of the enclosure. It sends low-frequency sounds to the woofer, high-frequency sounds to the tweeter and, if applicable, mid-frequency sounds to the midrange driver. Make sure all wires are secure and connected. Look for components on the network that look burnt, "bulged," or abnormal. If everything looks normal, connect the network to the drivers from another matching loudspeaker. **MAKE SURE** you attach the correct wires to each driver – mid- and low-frequency sounds can damage the tweeter! If there is still no sound or distorted sound, the network is defective. If there is clean undistorted sound, the drivers are defective.

Problem 2: No sound or distorted sound from one or more (but not all) drivers in an enclosure

Remove the problem driver(s) from the enclosure and make sure all wires are secure and connected. If they are, proceed with the following test:
Woofer or midrange driver – Connect the driver's + and – input terminals directly to the loudspeaker wires from your receiver/amplifier and play some music at a reasonable volume. If the driver now sounds normal (produces a clean, undistorted sound), the network is most likely defective.
Tweeter – Replace the tweeter with a functioning tweeter from another loudspeaker. If the tweeter now functions normally (produces clean, undistorted sound), the original tweeter is defective. If the replacement tweeter also sounds distorted or produces no sound, the network is most likely defective.

Problem 3: Loudspeakers distort, rattle or pop at higher volumes

This is usually NOT a loudspeaker problem. Common causes are too much power (playing the loudspeakers too loud and causing them to distort), an amplifier with not enough power (the amplifier can't produce the required volume without distorting), excessive equalization (turning the tone controls too far clockwise, and/or engaging the loudness/bass boost button on your receiver) or some combination of the above. If only one loudspeaker is exhibiting the problem, and you're confident that it's not caused by too little power/too much power/excessive equalization, see solutions for Problems 1 and 2.

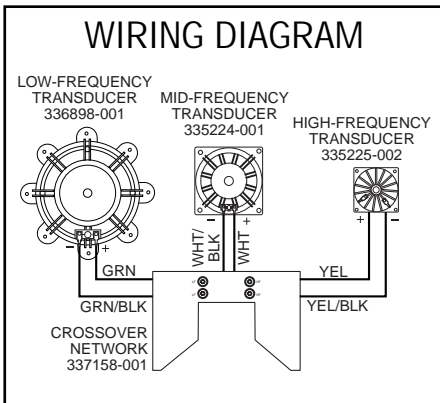

TO SERVICE THE CAS 3.1

To service the CAS 3.1 midrange or tweeter, the crossover network must be removed, (12) Phillips screws

EXPLODED VIEW

ITEM NO.	DESCRIPTION	QTY.	PART NO.	ITEM NO.	DESCRIPTION	QTY.	PART NO.
1.	Grille	1	337887-001	18.	Frame Gasket (frame to wall)	1	337554-001
2.	Front Baffle Assembly	1	337867-001	19.	Screw (tweeter & switch plate) 6-19 x .375" PPH	8	905401-006
3.	Low-Frequency Transducer 9" (228mm) C.M.M.D.	1	336898-001	20.	Screw (baffle to frame) #10-32 x 2" FHD BLK	4	704-01110-32
4.	Midrange-Frequency Transducer 3-1/2" (89mm) C.M.M.D.	1	335224-001	21.	Screw (woofer) 8-32 x .5" FPH BLK	8	901702-008
5.	High-Frequency Transducer 1" (25mm) C.M.M.D.	1	335225-002	22.	Screw (network) #8 x 1" PPH BLK	12	900101-016
6.	Midrange Cup	1	337211-001	23.	Screw (midrange) 8-32 x .5" FPH BLK	4	900201-008
7.	Gasket, Midrange Cup	1	335705-001	24.	Logo	1	338043-001
8.	Crossover Network	1	337158-001	25.	Paint Mask	1	337868-001
9.	Insert/Ferrule	4	336844-001	26.	Template	1	337869-001
10.	Isolator Cup	8	337970-001	27.	Shim, Installation	2	337990-001
11.	Isolator Shaft	4	337968-001	28.	Outer Carton	1	337863-001
12.	Isolator Retainer	4	337967-001	29.	Top/Bottom Foam Pad	2	337864-001
13.	Isolator Gasket	8	338157-001	30.	Owner's Manual	1	337581-001
14.	Isolator Grommet	4	337971-001	31.	Warranty Card	1	335841-002
15.	Isolator Sleeve	4	337969-001	32.	Survey Card	1	335868-002
16.	Housing/Mounting Frame	1	337866-001	33.	S1 DPTD Switch	1	074-030019-000
17.	Frame Gasket (baffle to frame)	1	337872-001	34.	Rubber Boot	1	072-050006-000
				35.	Grille Retainer	4	333249-001